

transformer HD

Cheat Sheet

System Requirements, Hot Keys, Wi-Fi



Transformer HD System requirements:

Supported Operating Systems:

- Windows 7, 8.1, 10
- Mac OS X
- Android 4.4 and Higher
- iOS 7 and Higher

Ram Requirements for Laptops & Desktops (AMD & Intel):

- 4GB or Greater

AMD Processor Requirements:

- Desktop- FX-7600P Processor family with 2.7GHz or higher
- Laptop- AMD A10-Series APU with 2.5GHz or higher

Amd Graphics Requirements

- Radeon R6 Graphics or Higher

Intel Processor Requirements:

- Core i3 with 2.4Ghz or higher

Intel Graphics Requirements:

- Intel HD Graphics 4600

Android Processor Requirements

- Exynos 7 Octa 5433 Octa-core1900 MHz,
- ARM Cortex-A57 and ARM Cortex-A53, 64-bit or higher

Android Ram Requirements

- 2GB or Greater for MediaTek and 3GB for non-MediaTek

Android Graphics Requirements

- Mali-T760 MP2 for MediaTek and Mali-T760 MP6 for non-MediaTek

iOS Processor Requirements

- Apple A7 Dual-core, 1300 Mhz, Cyclone, 64-bit or Higher

iOS Ram Requirements

- 1GB or Greater

iOS Graphics Requirement

- PowerVR G6430 or Higher

Transformer HD System requirements continued:

Wi-Fi Requirements:

- 802.11n 2.4GHz wireless adaptor

USB Requirements:

- USB 3.0

Power State Indicators and Battery Charging Status Table

Power Source	Unit State	Green LED	Amber LED	Description
DC	ON	SOLID	BLINKING	Battery Charging
DC	ON	SOLID	SOLID	Battery Full
Battery	ON	OFF	SOLID	Battery Full/Good
Battery	ON	OFF	BLINKING	Battery Low
Battery	Standby	OFF	SOLID	Standby
Battery	OFF	OFF	OFF	Full OFF

Display and Connection Readiness Table

Unit State	White LED	Description
ON	BLINKING ON and OFF	Device is not currently connected to any display interface but the device is on and ready to establish connection to HDMI, USB 3.0 or Wi-Fi. <i>*Please note that if you wish to power off the device and turn the blinking lights off simply hold the green power button down for five seconds.</i>
ON	Default ON (User defined)	Device is connected via Wi-Fi/USB/HDMI <i>*Please note that you can toggle the Light On and Off via application or On-Board Controls.</i>
Standby	OFF	This is a power saving mode and User must hit the Green Power button to power the device On to make it ready for use.
OFF	OFF	Device is Off (unless turned off by User) and is not ready for connection. <i>*Please note that the device is powered on by a brief power button press.</i>

GENERAL HELP	
Help	F1
Bring Transformer HD Window in Focus	CTRL ALT G
Battery Level	CTRL B
Restore Factory Settings	CTRL R
Product Information	F2
Quit	ALT F4

CAMERA	
Switching Camera	CTRL C
Freeze	Space bar
Image Capture	CTRL E
Start- Stop Recording	CTRL P
Zoom In	↑
Zoom Out	↓
Find Location	F
Auto Focus	CTRL A
Rotate Image	R

FILE	
Save Image	CTRL S
Open Image or Video	CTRL O

DISPLAY	
Light On/Off	L
Next Preferred Color Mode	C

WINDOW	
Minimize Window Size	CTRL M
Close OCR Window	CTRL W
Enable Full Screen	F7
Change Window Position	F8
Place Window in Bottom half of screen	CTRL ↓
Place Window in Top half of screen	CTRL ↑
Place Window in Left half of screen	CTRL ←
Place Window in Right half of screen	CTRL →
Increase or Decrease Horizontal Window Size	SHIFT →/←
Increase or Decrease Vertical Window Size	SHIFT ↓/↑
MARKERS	
Horizontal Marker	H
Vertical Marker	V
Marker Thickness	M
Marker Position	CTRL +/-
Marker Spacing	+/-
Cycle through Markers	CTRL G

Wi-Fi Connection instructions per platform:



Connect to a Wi-Fi network with Apple Device.

1. From your Home screen, go to Settings > Wi-Fi.
2. Turn on Wi-Fi.
Your device will automatically search for available Wi-Fi networks.
3. Transformer HD will appear with a Wi-Fi Name similar to EVTransformerXXXXXXX Where X represents the device serial number. Tap the name of the Transformer HD that corresponds with the Serial Number.
4. Secured Password default is “EV_TransformerHD”
5. Remember that powering Transformer HD off will disconnect the Wi-Fi if you have another default device connected in range it will automatically connect to that network instead of Transformer HD.

Connect to a Wi-Fi network with Android Device.

1. Press the **Home** button, and then press the **Apps** button. Navigate to **Settings**.
2. Under “Wireless and Networks”, make sure “Wi-Fi” is turned on, then press **Wi-Fi**. Tap the name of the Wi-Fi network that you want to join.
3. Transformer HD will appear with a Wi-Fi Name similar to EVTransformerXXXXXXX Where X represents the device serial number. Tap the name of the Transformer that corresponds with the Serial Number.
4. Secured Password default is “EV_TransformerHD”
5. Remember that powering Transformer HD off will disconnect the Wi-Fi if you have another default device connected in range it will automatically connect to that network instead of Transformer HD.

Connect to a Wi-Fi network with Windows Device Device.

1. Ensure the computer has a wireless network adapter
 1. Select the **Start** button, type **Device Manager**, and then select it
 2. Expand **Network adapters**
 3. Look for a network adapter that might have "wireless" in the name.
2. Select the **Network**  or  icon in the notification area.
3. Transformer HD will appear with a Wi-Fi Name similar to EVTransformerXXXXXXX Where X represents the device serial number. Tap the name of the Transformer that corresponds with the Serial Number.
4. Secured Password default is "EV_TransformerHD"
5. Remember that powering Transformer HD off will disconnect the Wi-Fi if you have another default device connected in range it will automatically connect to that network instead of Transformer HD.

Transformer HD Reset & Recovery:

If for any reason transformer is failing to connect, is not responding or has any other unusual behavior follow these steps

1. Press Reset Key on the underside of the Transformrer HD
2. Restart Computer or Tablet
3. Relaunch Application
4. Press the Power button on the Transformer HD

Distributor EV Technical Support Line

1 (800) 440-9476

1 (714) 374-1829

Press 3 for tech support

Hours: Monday - Friday

7:00 a.m. - 5:00 p.m. (P.S.T.)

**enhanced
vision**